



MANUAL







FS520x **POWER BANK 20.000**

Gebruiksaanwijzing
Gebrauchsanweisung
Mode d'emploi
Bruksanvisning
Brugsvejledning

Käyttöopas
Uživatelská příručka
Používateľská príručka
Εγχειρίδιο χρήσης
دەستەسەلمە ئالەم لى دە



1 SPECIFICATIONS

-  20.000 mAh Li-Polymer / 74Wh
-  2x USB-C PD 35W
1x USB-A 22.5W (QC 3.0 18W / SCP 22.5W)
-  USB-C PD 35W input
-  143x77x28 mm
-  380 grams
-  1x USB-C PD cable
1x Manual

When using multiple outputs

 
When using 2 outputs

- ①/② Share 15W
- ②/③ Share 15W
- ①/③ Share 15W

When using all outputs

- ①/②/③ Share 15W

PRODUCT OVERVIEW 2

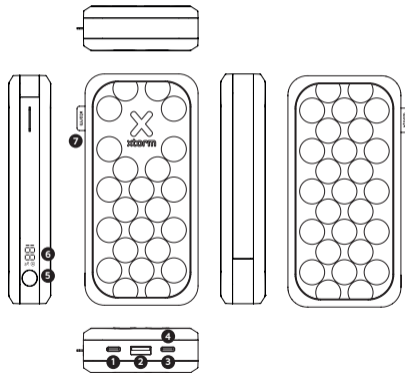

Output
USB-C PD 35W ①

Output
USB-A 22.5W
QC 3.0 18W / SCP 22.5W ②

Output
USB-C PD 35W ③

 
Input
USB-C PD 35W ④

Power Button ⑤

Digital Power Indicator ⑥

Official Xtorm Label ⑦

3 CHARGING YOUR DEVICE

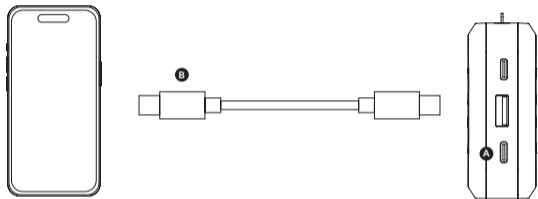


COMPATIBLE DEVICES



- 3A** Connect the USB-C end of the charging cable to the USB-C PD output of the Power Bank and the other end to the input of your device. The charging will start automatically.
- 3B** Charging some devices requires a charging cable other than the one supplied. E.g. an Apple Lightning® or a Micro USB cable.

 
RECHARGING THE POWER BANK 4

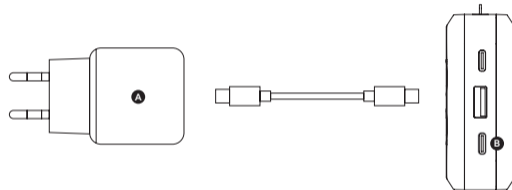

- 4A** Connect the USB-C end of the charging cable to output 3 of the Power Bank and the USB end to a wall charger.
- 4B** For the fastest charging possible use a 35W charger. This will fully recharge the Power Bank within 3.3 hours.



5 LED POWER INDICATOR

IN THE BOX 6

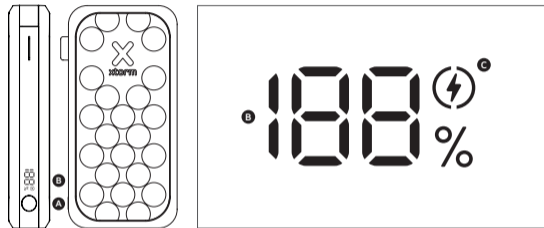

- 5A** Power Button function:
- Single press to turn on the Power Bank.
 - Double press to turn off the Power Bank.
 - Long press (5s) activates "Low power mode" (to keep charging devices that request <100mA current)
- 5B** The display shows the remaining battery percentage between 0% (empty) and 100% (fully charged).

  - 5C** The fast charge indicator will light up when you are using the correct cable for fast charging your device. (35W USB-C PD and higher).

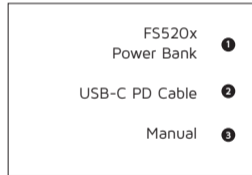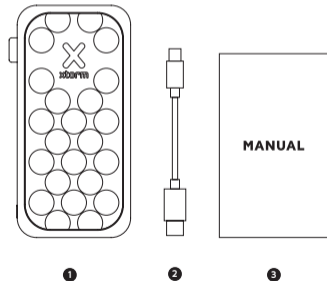

EN - ENGLISH

1 SPECIFICATIONS

2 PRODUCT OVERVIEW

3 CHARGING YOUR DEVICE

3.A Connect the USB end of the charging cable to the USB-A output of the Power Bank and the other end to the input of your device. The charging will start automatically.

3.B Charging some devices requires a charging cable other than the one supplied. E.g. an Apple Lightning® or a Micro USB cable.

4 RECHARGING THE POWER BANK

4.A Connect the USB-C end of the charging cable to output 3 of the Power Bank and the USB end to a wall charger.

4.B For the fastest charging possible use a 35W USB-C PD charger. This will fully recharge the Power Bank within 3.3 hours.

5 LED POWER INDICATOR

5A Power Button function:

- Single press to turn on the Power Bank.
- Double press to turn off the Power Bank.
- Long press (5s) activates "Low power mode" (to keep charging devices that request <100mA current)

5B The display shows the remaining battery percentage between 0% (empty) and 100% (fully charged).

5C The fast charge indicator will light up when you are using the correct cable for fast charging your device. (35W USB-C PD and higher).

6 IN THE BOX

NL - NEDERLANDS

1 SPECIFICATIES

2 PRODUCT OVERZICHT

3 OPLADEN VAN JOUW APPARAAT

3.A Sluit het USB uiteinde van de oplaadkabel aan op de USB-A uitgang van de Powerbank en het andere uiteinde op de ingang van je apparaat.

3.B Voor het opladen van sommige apparaten is een andere oplaadkabel nodig dan de bijgeleverde USB naar USB-C kabel. Bijv. een Apple Lightning® of Micro USB kabel.

4 OPLADEN VAN DE POWER BANK

4.A Sluit het USB-C uiteinde van de oplaadkabel aan op uitgang 3 van de Powerbank en het andere uiteinde op een wandlader.

4.B Gebruik een 35W USB-C oplader voor het snelst mogelijke opladen. Hierdoor is de Powerbank binnen 3,3 uur weer volledig opgeladen.

5 LED-STROOMINDICATOR

5A Aan/uit-knop functie:

- Eén keer drukken om de Power Bank aan te zetten.
- Dubbel indrukken om de Power Bank uit te schakelen.
- Lang indrukken (5s) activeert de "spaarstand" (om apparaten te blijven opladen die <100mA stroom vragen).

5B Het display toont het resterende batterijpercentage tussen 0% (leeg) en 100% (volledig opgeladen).

5C De snellaadindicator licht op als je de juiste kabel gebruikt om je apparaat snel op te laden. (35W USB-C PD en hoger).

6 IN DE DOOS



HIGHER QUALITY
= LOWER IMPACT

CUSTOMER SUPPORT

support@tag.nl

+31 (0)30 635 4800

TELCO ACCESSORIES GROUP

Hoofdveste 19, 3992DH Houten

The Netherlands

#MOREENERGY 

XTORM.EU