

 


# MANUAL





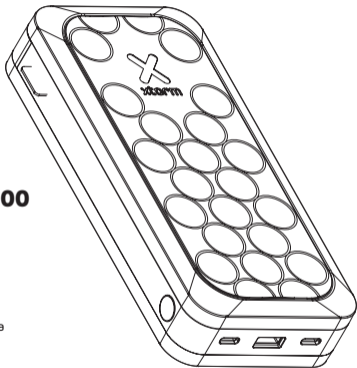

FS5271 **POWER BANK 27.000**

Gebruiksaanwijzing  
Gebrauchsanweisung  
Mode d'emploi  
Bruksanvisning  
Brugsvejledning

Käyttöopas  
Uživatelská příručka  
Používateľská príručka  
Εγχειρίδιο χρήσης  
دەستەبەندی بەکارهێنەر



# 1 SPECIFICATIONS

-  27.000 mAh Li-Polymer / 99.9Wh
-  1x USB-C PD 67W  
1x USB-C PD 27W  
1x USB-A 22.5W (QC 3.0 18W / SCP 22.5W)
-  USB-C PD 67W input
-  168x83x33 mm
-  562 grams
-  1x USB-C PD cable  
1x Manual

 
## When using multiple outputs

### When using 2 outputs

- ①/② Share 15W
- ②/③ 18W + 45W
- ①/③ 27W + 40W

### When using all outputs

- ①/② Share 15W ③ 45W

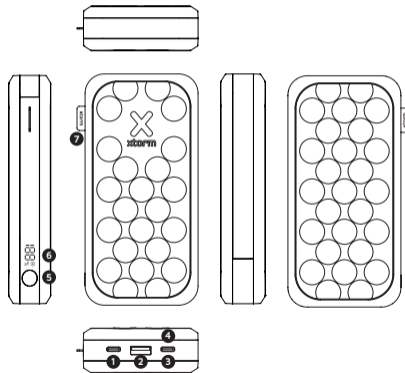

# 2 PRODUCT OVERVIEW

Output  
USB-C PD 27W ①

Output  
USB-A 22.5W  
QC 3.0 18W / SCP 22.5W ②

Output  
USB-C PD 67W ③

 
Input  
USB-C PD 67W ④

Power Button ⑤

Digital Power Indicator ⑥

Official Xtorm Label ⑦

### 3 CHARGING YOUR DEVICE

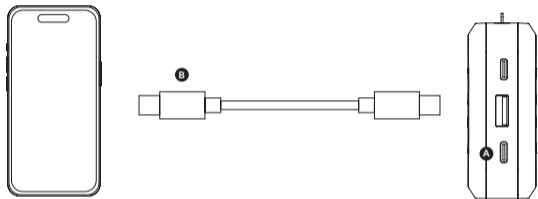


#### COMPATIBLE DEVICES



- 3A** Connect the USB-C end of the charging cable to the USB-C PD output of the Power Bank and the other end to the input of your device. The charging will start automatically.
- 3B** Charging some devices requires a charging cable other than the one supplied. E.g. an Apple Lightning® or a Micro USB cable.

 
### RECHARGING THE POWER BANK 4

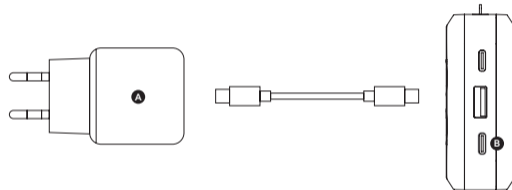

- 4A** Connect the USB-C end of the charging cable to output 3 of the Power Bank and the USB end to a wall charger.
- 4B** For the fastest charging possible use a 67W charger. This will fully recharge the Power Bank within 4 hours.


## 5 LED POWER INDICATOR

## IN THE BOX 6

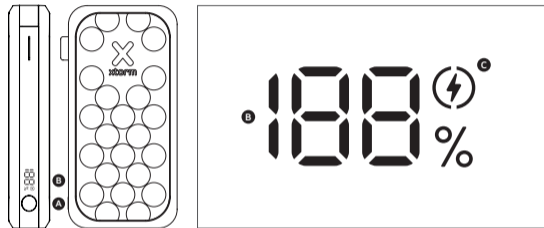

- 5A** Power Button function:
- Single press to turn on the Power Bank.
  - Double press to turn off the Power Bank.
  - Long press (5s) activates "Low power mode" (to keep charging devices that request <100mA current)
- 5B** The display shows the remaining battery percentage between 0% (empty) and 100% (fully charged).

 - 5C** The fast charge indicator will light up when you are using the correct cable for fast charging your device. (67W USB-C PD and higher).

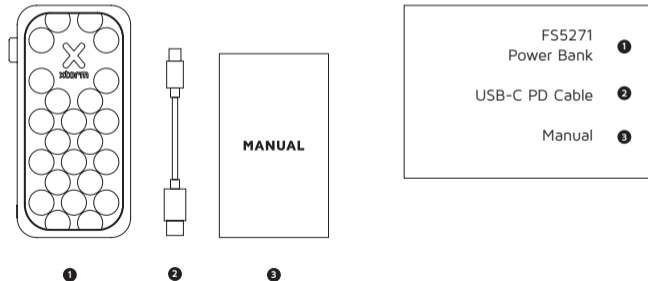

# EN - ENGLISH

---

## 1 SPECIFICATIONS

## 2 PRODUCT OVERVIEW

## 3 CHARGING YOUR DEVICE

**3.A** Connect the USB end of the charging cable to the USB-A output of the Power Bank and the other end to the input of your device. The charging will start automatically.

**3.B** Charging some devices requires a charging cable other than the one supplied. E.g. an Apple Lightning® or a Micro USB cable.

## 4 RECHARGING THE POWER BANK

**4.A** Connect the USB-C end of the charging cable to output 3 of the Power Bank and the USB end to a wall charger.

**4.B** For the fastest charging possible use a 67W USB-C PD charger. This will fully recharge the Power Bank within 4 hours.

## 5 LED POWER INDICATOR

**5A** Power Button function:

- Single press to turn on the Power Bank.
- Double press to turn off the Power Bank.
- Long press (5s) activates "Low power mode" (to keep charging devices that request <100mA current)

**5B** The display shows the remaining battery percentage between 0% (empty) and 100% (fully charged).

**5C** The fast charge indicator will light up when you are using the correct cable for fast charging your device. (67W USB-C PD and higher).

## 6 IN THE BOX

# NL - NEDERLANDS

---

## 1 SPECIFICATIES

## 2 PRODUCT OVERZICHT

## 3 OPLADEN VAN JOUW APPARAAT

**3.A** Sluit het USB uiteinde van de oplaadkabel aan op de USB-A uitgang van de Powerbank en het andere uiteinde op de ingang van je apparaat.

**3.B** Voor het opladen van sommige apparaten is een andere oplaadkabel nodig dan de bijgeleverde USB naar USB-C kabel. Bijv. een Apple Lightning® of Micro USB kabel.

## 4 OPLADEN VAN DE POWER BANK

**4.A** Sluit het USB-C uiteinde van de oplaadkabel aan op uitgang 3 van de Powerbank en het andere uiteinde op een wandlader.

**4.B** Gebruik een 67W USB-C oplader voor het snelst mogelijke opladen. Hierdoor is de Powerbank binnen 4 uur weer volledig opgeladen.

## 5 LED-STROOMINDICATOR

**5A** Aan/uit-knop functie:

- Eén keer drukken om de Power Bank aan te zetten.
- Dubbel indrukken om de Power Bank uit te schakelen.
- Lang indrukken (5s) activeert de "spaarstand" (om apparaten te blijven opladen die <100mA stroom vragen).

**5B** Het display toont het resterende batterijpercentage tussen 0% (leeg) en 100% (volledig opgeladen).

**5C** De snellaadindicator licht op als je de juiste kabel gebruikt om je apparaat snel op te laden. (67W USB-C PD en hoger).

## 6 IN DE DOOS



**HIGHER QUALITY**  
= LOWER IMPACT

**CUSTOMER SUPPORT**

support@tag.nl  
+31 (0)30 635 4800

**TELCO ACCESSORIES GROUP**

Hoofdveste 19, 3992DH Houten  
The Netherlands

**#MOREENERGY** 

**XTORM.EU**