

 


MANUAL

FS5W101 **WIRELESS**
POWER BANK 10.000

Gebruiksaanwijzing
Gebrauchsanweisung
Mode d'emploi
Bruksanvisning
Brugsvejledning

Käyttöopas
Uživatelská příručka
Používateľská príručka
Εγχειρίδιο χρήσης
دستگاه استفاده ليدل

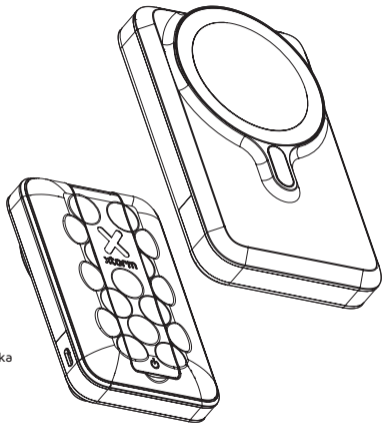

1 SPECIFICATIONS


 10.000 mAh Li-Poly / 38.5W

 Wireless 15W
USB-C PD 20W

 
 USB-C PD 18W input

 111x72x24 mm

 229 grams

 1x USB-C to USB-C cable
1x Manual

PRODUCT OVERVIEW 2

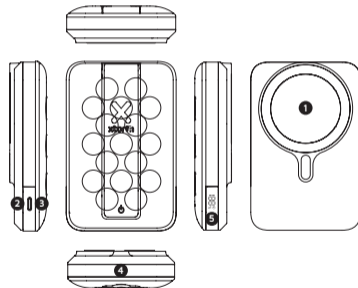

Output
Wireless 15W ❶

 
Output
USB-C PD 20W ❷

Input
USB-C PD 18W ❸

Power Button ❹

Digital Capacity
Indicator ❺

3 CHARGING YOUR DEVICE

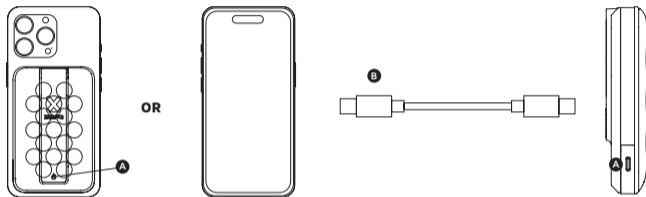


COMPATIBLE DEVICES




- 3A** Snap the Power Bank to the back of your phone magnetically or connect the USB-C end of the charging cable to the USB-C PD output of the Power Bank and the other end to the input of your device. Press the kickstand/power button to start charging.
- 3B** Charging some devices requires a charging cable other than the one supplied. E.g. an Apple Lightning® or a Micro USB cable.

 RECHARGING THE POWER BANK 4

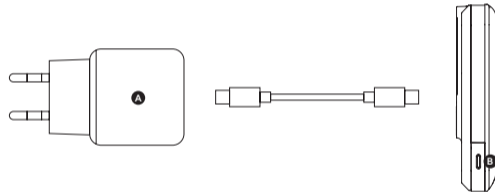

- 4A** Connect the USB-C end of the charging cable to output 2 of the Power Bank and the USB end to a wall charger.
- 4B** For the fastest charging possible use a 20W USB-C PD charger. This will fully recharge the Power Bank within 3 hours.

 5 LED POWER INDICATOR

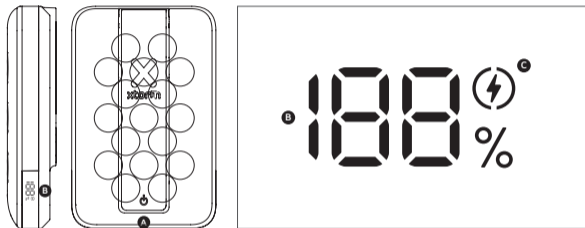


5A Press the Power Button once to display the battery level remaining in the Power Bank via the LED display. Improved Power Button function:

- single press to turn on/off the display
- double press to fully turn on/off the Power Bank

5B The display shows the remaining battery percentage between 0% (empty) and 100% (fully charged).

IN THE BOX 6

 5C The fast charge indicator will light up when you are using the correct cable for fast charging your device. (20W USB-C PD and higher).

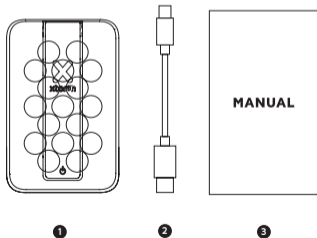

FS5W101
Wireless Power Bank ①
USB-C to USB-C Cable ②
Manual ③

EN - ENGLISH

1 SPECIFICATIONS

2 PRODUCT OVERVIEW

3 CHARGING YOUR DEVICE

3.A Snap the Power Bank to the back of your device magnetically or connect the USB-C end of the charging cable to the USB-C PD output of the Power Bank and the other end to the input of your device. Press the kickstand to start charging.

3.B Charging some devices requires a charging cable other than the one supplied. E.g. an Apple Lightning® or a Micro USB cable.

4 RECHARGING THE POWER BANK

4.A Connect the USB-C end of the charging cable to output 2 of the Power Bank and the USB end to a wall charger.

4.B For the fastest charging possible use a 20W USB-C PD charger. This will fully recharge the Power Bank within 3 hours.

5 LED POWER INDICATOR

5A Press the Power Button once to display the battery level remaining in the Power Bank via the LED display. Improved Power Button function:

- single press to turn on/off the display
- double press to fully turn on/off the Power Bank

5B The display shows the remaining battery percentage between 0% (empty) and 100% (fully charged).

5C The fast charge indicator will light up when you are using the correct cable for fast charging your device. (20W USB-C PD and higher).

6 IN THE BOX

NL - NEDERLANDS

1 SPECIFICATIES

2 PRODUCT OVERZICHT

3 OPLADEN VAN JOUW APPARAAT

3.A Klik de Power Bank magnetisch vast aan de achterkant van je telefoon of sluit het USB-C uiteinde van de oplaadkabel aan op de USB-C PD-uitgang van de Power Bank en het andere uiteinde op de ingang van je apparaat. Druk op de kickstand/aan/uit-knop om het opladen te starten.

3.B Voor het opladen van sommige apparaten is een andere oplaadkabel nodig dan de bijgeleverde USB naar USB-C kabel. Bijv. een Apple Lightning® of Micro USB kabel.

4 OPLADEN VAN DE POWER BANK

4.A Sluit het USB-C uiteinde van de oplaadkabel aan op uitgang 2 van de Powerbank en het andere uiteinde op een wandlader.

4.B Gebruik een 20W USB-C PD oplader voor het snelst mogelijke opladen. Hierdoor is de Powerbank binnen 3 uur weer volledig opgeladen.

5 LED-STROOMINDICATOR

5A Druk één keer op de aan/uit-knop om het resterende batterijniveau in de Power Bank via het LED-display. Verbeterde powerbutton-functie:

- één keer drukken om de display aan/uit te zetten
- tweemaal drukken om de powerbank volledig in of uit te schakelen

5B Het display toont het resterende batterijpercentage tussen 0% (leeg) en 100% (volledig opgeladen).

5C De snellaadindicator licht op als je de juiste kabel gebruikt om je apparaat snel op te laden. (20W USB-C PD en hoger).

6 IN DE DOOS



HIGHER QUALITY
= LOWER IMPACT

CUSTOMER SUPPORT

support@tag.nl
+31 (0)30 635 4800

TELCO ACCESSORIES GROUP

Hoofdveste 19, 3992DH Houten
The Netherlands

#MOREENERGY 

XTORM.EU